

User Manual - ENG

Thank you for purchasing the Accent NEON Lite phone and we wish you many pleasant experiences with it.

Use the phone only for calls and other intended activities (emails, SMS taking photos, playing movies, music, etc.).

Do not make a call while driving a car, bike or any other vehicle.

Do not throw the battery into a fire and do not damage it mechanically or in any way.

Keep the phone and battery away from direct sunlight, high temperatures above 40 °C, water and moisture and frost below -5 °C.

Charge the phone with the enclosed or approved USB charger and cable. Uncertified chargers or USB cables can damage the device.

For the disposal of any part of the phone or packaging use recycling collection sites.

Never try to repair the phone yourself, in the case of a malfunction pass the phone to an authorised service centre. The phone and the screen are not shockproof. The phone is an electronic device and requires knowledge for the operation of such a device. Do not clean the phone surface with chemicals, clean only with a damp cloth.

For proper functioning of the phone set the date and time. This setting appears immediately when you first turn your phone on. If not, go through the following menu icon



to the settings



and scroll to the Date and Time.

The phone works with the Android 6.0 operating system. For full functionality, applications upgrades and download of new applications, please create a Google account that you can establish free. Go to settings  and scroll to Accounts, and then Add account. If you already have an account, you can use that account.

MAKING A CALL

Under the back cover there are three slots. The first and second from right are used to insert the SIM card and the third one is for inserting a micro SD memory card with up to 32 GB. Insert the SIM card and memory card only when the phone is turned off. After inserting your SIM card and memory card (not required), insert the battery and put the cover on the phone. Turn on the phone and enter PIN (if you have one set). The phone is ready for calls.

CALLS, SMS AND LIST OF CONTACTS

Press the following key  to open the dialler, and you can dial a number. If you need to call from a contact list, go to the menu and search for Contacts. Your contacts should be there.

You can accept or reject a call by clicking and dragging the headphones icon  while ringing. By moving to the right you answer, to the left you reject the call. Pull up to reject

call with a text message. A call can be ended by pressing  .

An SMS can be sent by clicking on the following icon  and select the pencil icon.

Select a recipient from the phone book, write the text and send by using  .

BUTTONS

On the right side there is volume button (bigger button) and the on and off switch (smaller) button. To turn on and off or reset hold the smaller button for about 5 seconds. To change the volume, press the upper or lower part of the larger button. When calling this button controls the speaker volume.

CONNECTORS

At the bottom of the phone there is a USB connector for a USB cable that can charge the phone or transfer files between your phone and computer. On top of the phone there is a hole for the 3.5mm audio headphone jack. The connectors must be kept clean and USB

cables of the charger and headphones have to be plugged perpendicularly to the holes in the device.

DISPLAY

The phone has a touch screen. On the bottom part there are three basic buttons. On the left there is a square, with which you can invoke the enabled applications, you can also move or to turn them off by dragging them to the side. Amid there is a wheel which you can use to return to the phone's home screen. On the right there is a triangle, which takes you one step back.

To access the main menu use the following icon  there you can open individual applications or by holding them you can place them on the main screen.

CAMERA

The phone is equipped with an 8MP camera on the front and a 16MP camera on the back.

The camera can be started using . To take a photo, press , for video recording press

 To change to a selfie camera press . Camera settings can be performed by clicking . Photos are automatically saved in the phone memory or memory card. Select the option for storage by  clicking Storage. You can see the photos immediately after taking it, or in the gallery. Photos can be enlarged or reduced by moving two fingers lying on the screen, which you put closer or farther. You can send a photo by pressing , when viewed in the photo gallery, where you choose Bluetooth, MMS, email and other applications

FINGER PRINT

The phone is equipped with a fingerprint function. With this function you can lock the phone or its individual applications. The fingerprint sensor is on the back side of the phone under the lens of the camera. The adjustments can be made over icon  and clicking Fingerprint. Follow the instructions of the guide.

WI-FI AND BLUETOOTH

To use the functions it is necessary to enable this option in settings  and clicking on the text item of Wi-Fi or Bluetooth. Wi-Fi and Bluetooth connections are always protected with a password. By connecting to a public Wi-Fi network you can provide data to third parties.

PHONE FEATURES

Frequency	FDD LTE Band1//3/7/20, WCDMA 900/2100Mhz, GSM 850/900/1800/1900Mhz
Display	5" IPS (1280*720)
Processor	MTK6737, Quad-Core 4 Cortex-A53 1,3GHz
Memory	2GB/16GB + smicroSD slot for cards up to 32GB
Camera	5MP Front / 13MP Rear + flash
Battery	2000mAh
Dimensions / weight	143*69*8,2mm / 164g

Bluetooth / Wi-Fi	BT4.0 / IEEE 802.11 b/g/n
Audio / Video Player	audio encode-AMR audio decode-MP3- AMR,AAC,MIDI,WAV,WMA / mp4, 3gp, AVI, MWV
Other functions	Android 6.0, GPS, close light sensor,
Radiation	SAR indicator 1.0w/kg

WARRANTY CARD

Phone model: Accent NEON Lite

Phone IMEI:

Date of sale:

Date of repair 1:

Date of repair 2:

Date of repair 3:

Date of repair 4:

Keep the repair sheets of the service. Complaints are governed by the Warranty terms and conditions of phonelevel.eu GSM s.r.o. on www.accent-mobile.cz.